


ASSEMBLY




Remove the cheekpads as indicated in the Communicator's instruction manual.

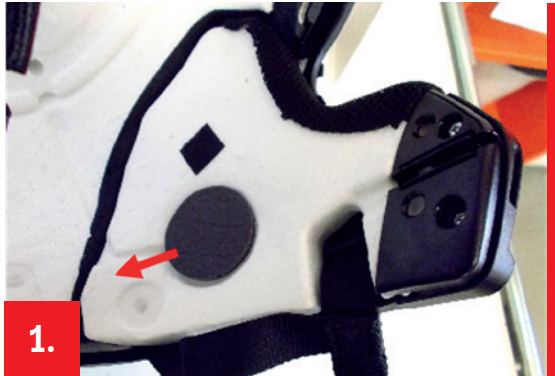

Remove the noise protection inserts from the speakers seats.




Place the right speaker (R) in its seat after applying the adhesive round shaped velcro included in the package.

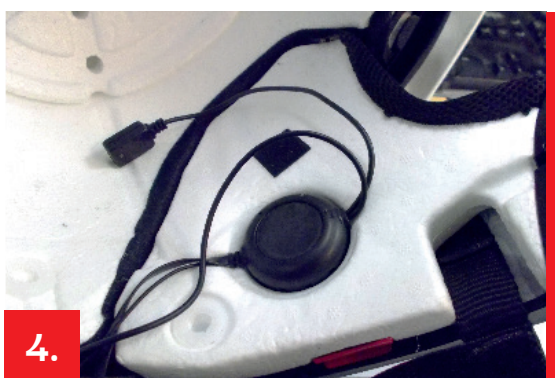

Repeat the operations performed for the right (R) speaker for positioning the left (L). Warning the left speaker must be rotated of 180 ° before being placed in the seat.

ASSEMBLY

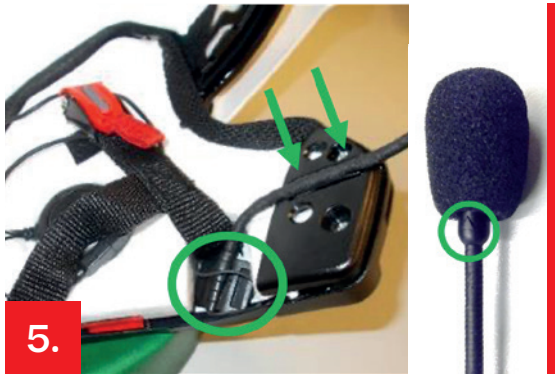

Place the microphone base under the chinstrap in the cavity of the EPS cheekpads. Fit the microphone boom in the seat in the inner plate

WARNING check that the triangle on the microphone is facing the mouth.



Remove the inner liner. Place the cables in the gap between the inner and outer shell.



Place the BT controller in the designated slot on the back of the inner shell.




Place the USB socket between the removable cheek pads and the neckroll.

ASSEMBLY



Pass the flat cable of the remote control between the neckroll's pp plate and the shell. The remote control must remain accessible outside the helmet.

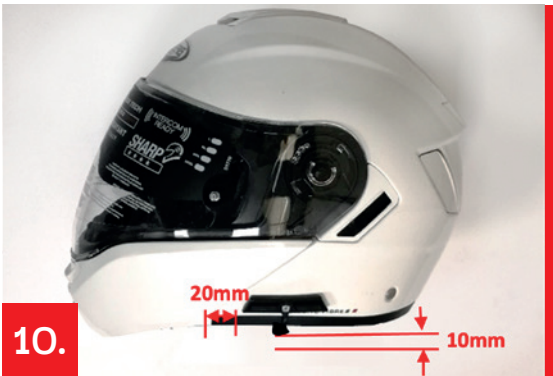

Fit the keypad on the left side (helmet on), approximately 10 mm from the lower edge of the shell using the provided adhesive. Make sure that there is no interference with the chin guard and full contact surface between the adhesive keypad and the outer shell.